

<https://www.ecuhelpshop.com/>

KT200 Offline Workstation Manual

[understand more \(Learn more\)](#)



KT200 Offline Workstation

- 1. Plug in the device (**Figure 1**) , run the setup, and install the KT200 software (**Figure 2**) .



Figure 1



Figure 2

<https://www.ecuhelpshop.com/>


2. After installing the KT200 software, make sure the C drive has a capacity of 15G or more.



has more than 15G of hard drive capacity

<https://www.ecuhelpshop.com/>

3. Make sure you have enough space to run the installation of KT200_ftp

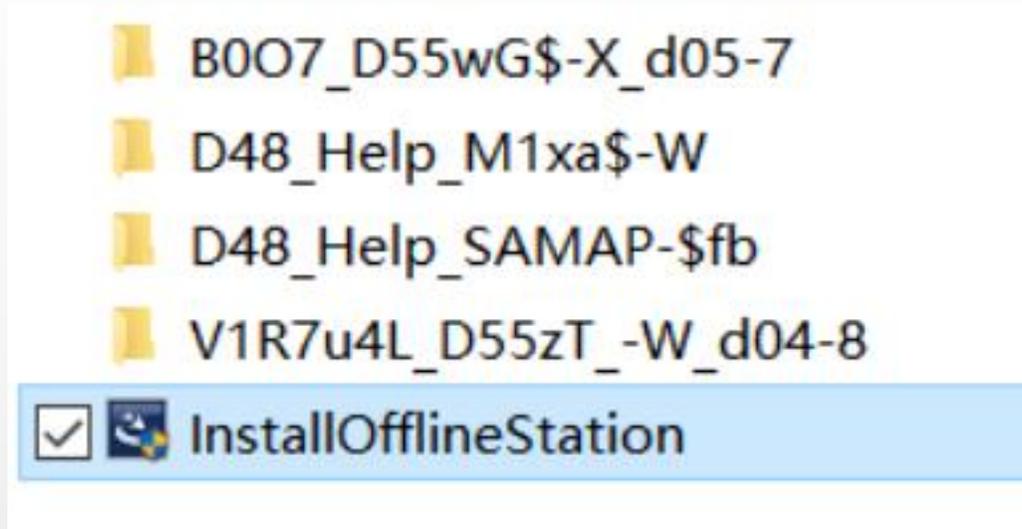


run the installation of KT200_ftp

<https://www.ecuhelpshop.com/>

4. After completing the installation, insert the dongle and run the KT200.exe program to complete the first update activation..



Offline workstation dongle

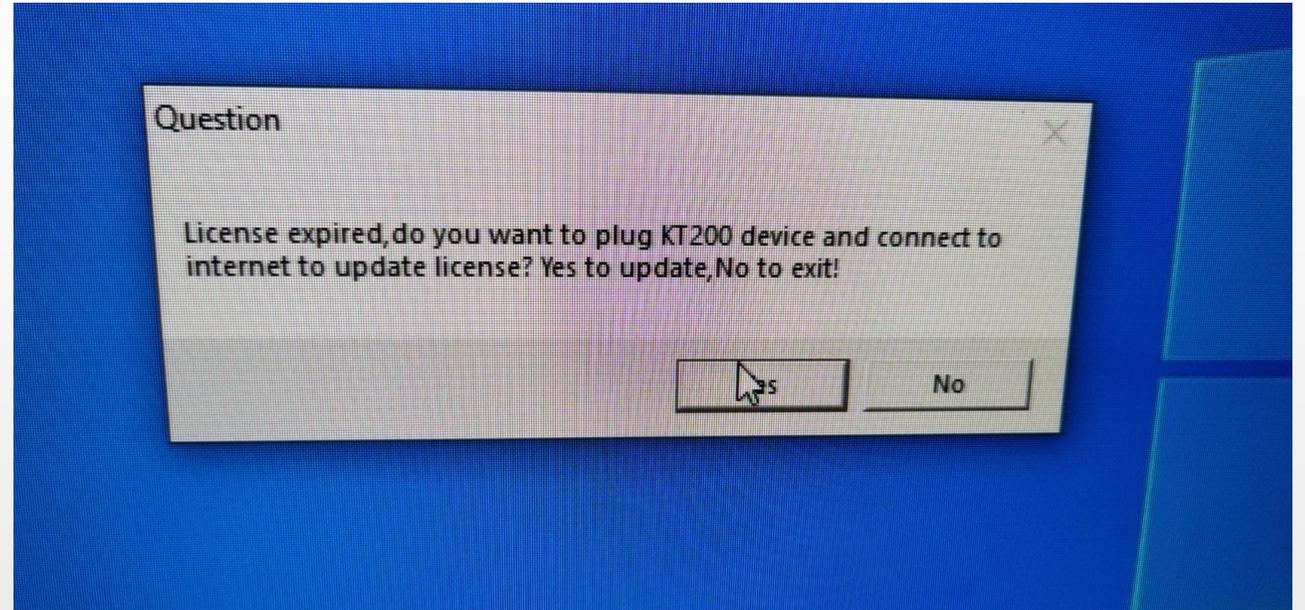

Click to activate and network every 15 days

5. Complete the activation and open the software.

