



## ECUHELP KT200 Quick Guide

*Thank you for purchasing ECUHELP KT200 ECU Programmer.*

ECUHELP KT200 is a complete tool for reading and programming engine control units via OBD and via the Boot mode and Jtag systems. Full system and Bench mode also available. A unique solution for the mechanics. \*Additional TCU package available for Automatic Transmissions.

1. ECUHELP KT200 allows serial communication with the Engine and Automatic transmission control units via the OBD diagnostic socket
2. Professional software for reading and programming the control units of: CAR, TRUCK, MOTORBIKE, TRACTOR and BOAT

## ECUHELP KT200 Software Download

Visit the official shop <https://www.ecuhelpshop.com/pages/downloads/>

### 1. setup2023online

Compatibility:

ECUHELP KT200 [Auto version](#)

ECUHELP KT200 Full Version

### 2. setup2023offline

Compatibility: ECUHELP KT200 Offline Workstation (full version + offline dongle)

Installation tips:

Step 1: Install "KT200\_FTP.ZIP" offline server, which requires 12GB free space.

The FTP server should be installed in the same directory where the executable file, "kt200.exe," is located.

Step 2: Install "setup2023offline"


\*\*\* Important Note \*\*\*

You MUST disable your anti-virus and firewall in order to download the software, driver and updates. Any active anti-virus will try to delete the files as it does not recognize the file as safe. They are safe but because of language issue it is often seen as a virus and it will delete your files. YOU MUST DISABLE YOUR ANTI-VIRUS AND FIREWALL or you will not be able to download the software properly.

\*\*\* Important Note \*\*\*

Related Tech Support:

[ECUHELP KT200 ECU Programmer Installation Guide](#)

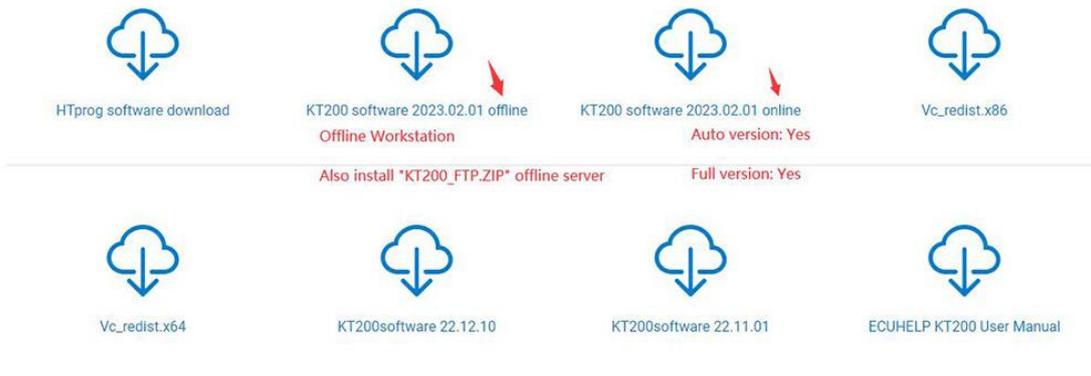

## ECUHELP KT200 Software Installation:


Prepare:

- >Operating system: Windows 7, Windows 8/8.1, Windows 10, Windows 11
- >Minimum Recommended Requirements: CPU > 2.5 GHz (Intel i5, i7), RAM > 8GB
- >Win defender + Antivirus disabled As ADMIN
- > Set time and timezone auto
- > Connect KT200 hardware + power supply
- > Please install software in Disk C://
- > Install drivers for device

## Get started


### 1. You MUST turn off Win defender:

Settings -> Windows Security -> Virus threat protection -> Firewall & Network protection -> Domain network -> Off the Defender Firewall -> Private Network-> Off the Defender Firewall-> Public Network -> Off the Defender Firewall

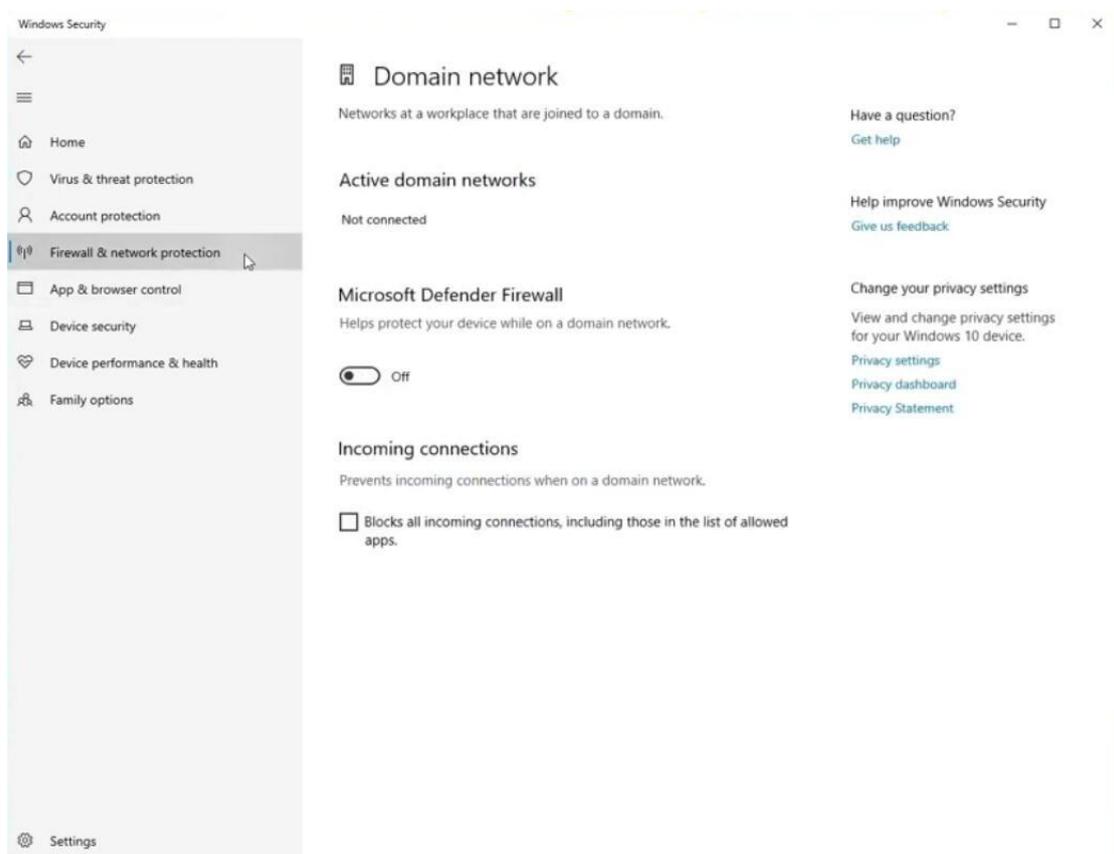

## 2. Install ECUHELP KT200 Software

Run KT200 setup, it will be automatically finished.

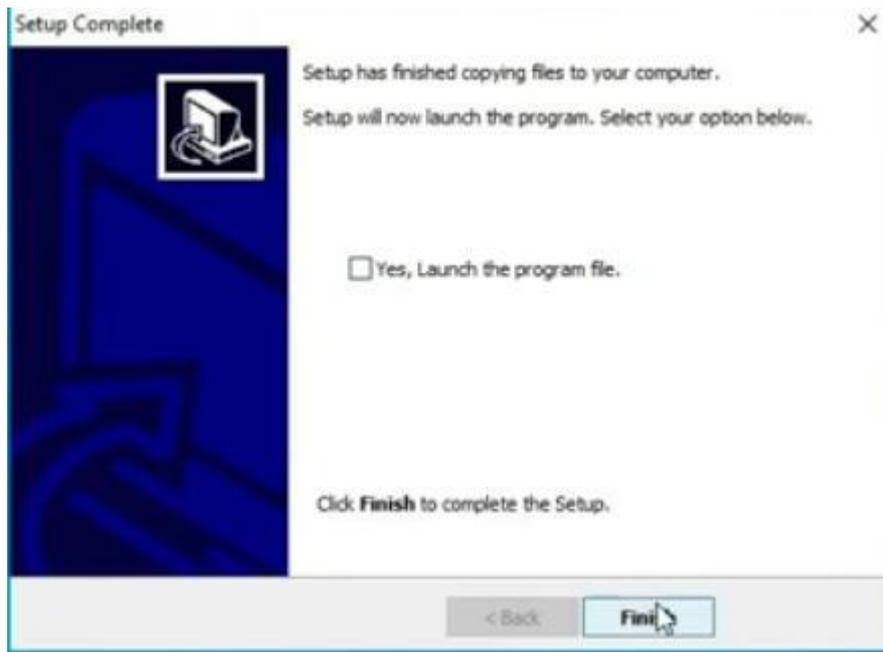

### 3. Install ECUHELP KT200 Driver

Please firstly connect KT200 device to the computer and give power. Go to "Setup2023\_KT200>Driver" to install "dpinst\_amd64" until finish.



Update Driver:

Right click on my computer, then Manage -> Device Manager -> Universal Serial Bus controllers, right click on D-F-B and select "Update Driver", select "C:\KT200 \D-F-B DRIVER" to install.

### 4. Run ECUHELP KT200 Software

On the desktop,click "KT200" to run KT200 software.



Next is to click on “Select Driver” to read / write ECU or TCU for car, truck, motorbike, boat and tractor. KT200 will support the mode of Bench, OBD, BOOT, BDM / JTAG.

Overall, ECUHELP KT200 ECU Programmer is a worth to own.

**For service and support, please contact us.**

<https://www.ecuhelpshop.com/> Email: Sales@ECUHELPshop.com

WhatsApp: + 8618205996549 Phone: +86-18205996549

Our Location: Mertensstraße 65, Berlin 13587, Germany

Copyright ©2023 ECUHELP SHOP LTD. All rights reserved.



